HOME
DECORATORS
C O L L E C T I O N

HDC# 13627 MFG# TW-19059SC
ESSEX WALL JEWELRY CABINET 32"Hx15"Wx4"D

ASSEMBLY INSTRUCTIONS

Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.
2. You need at least 2 people to finish the assembly of this product.

Made In China

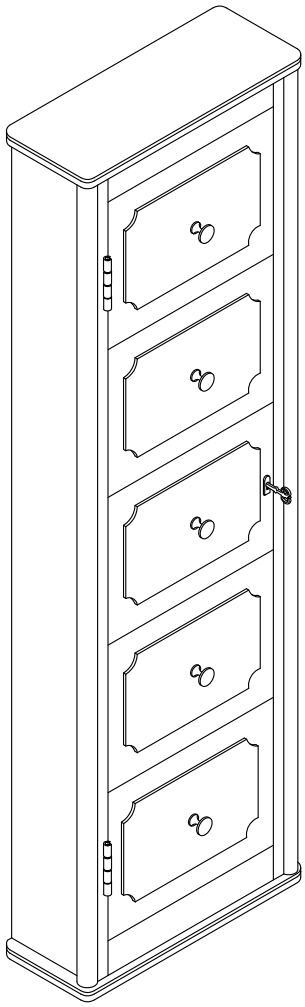

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

ASSEMBLY TOOLS REQUIRED

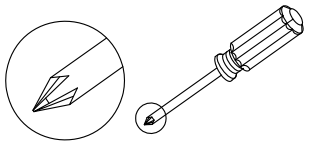

"+"Screw driver

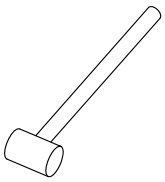

Rubber Mallet

Electric drill

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PARTS ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF THE PART NEEDED.

HARDWARE LIST

GECKO FLAT HEAD SCREW 2 SETS (1)	KEY 1 PC  (2)			

PARTS LIST

JEWELRY CABINET 1 PC  A	WOOD BAR 1 PC  B	

STEP 1: ASSEMBLE WOOD BAR (B)

- USE ELECTRIC DRILL TO DRILL 2 SMALL HOLES ON THE DESIRED LOCATION OF THE WALL. INSERT THE 2 GECKOS INTO THE HOLES BY RUBBER MALLET. USE 2 FLAT SCREWS TO FIX WOOD BAR (B) ONTO THE 2 GECKOS AS SHOWN.

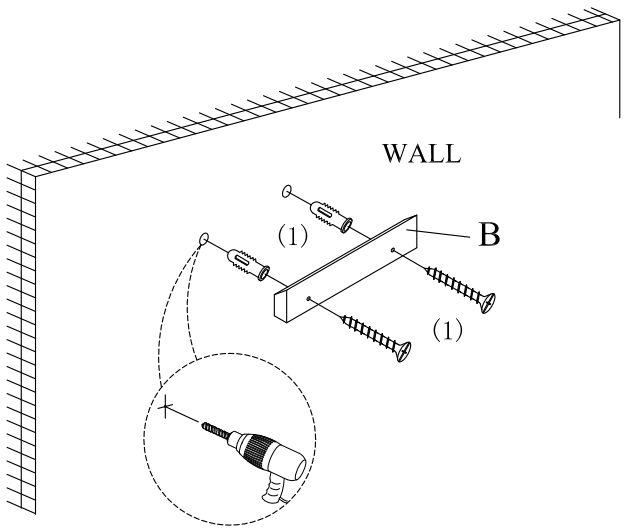

STEP 2: HANG UP JEWELRY CABINET (A)

- HANG UP THE JEWELRY CABINET (A) ON THE WOOD BAR (B) AND INSERT THE KEY (2) INTO THE KEY HOLE ON THE FRONT DOOR AS SHOWN.